


SPCC-P25050 SIGNATURE SERIES PISTOL TOOL

EXPLODED VIEW

PAGE 1 of 2

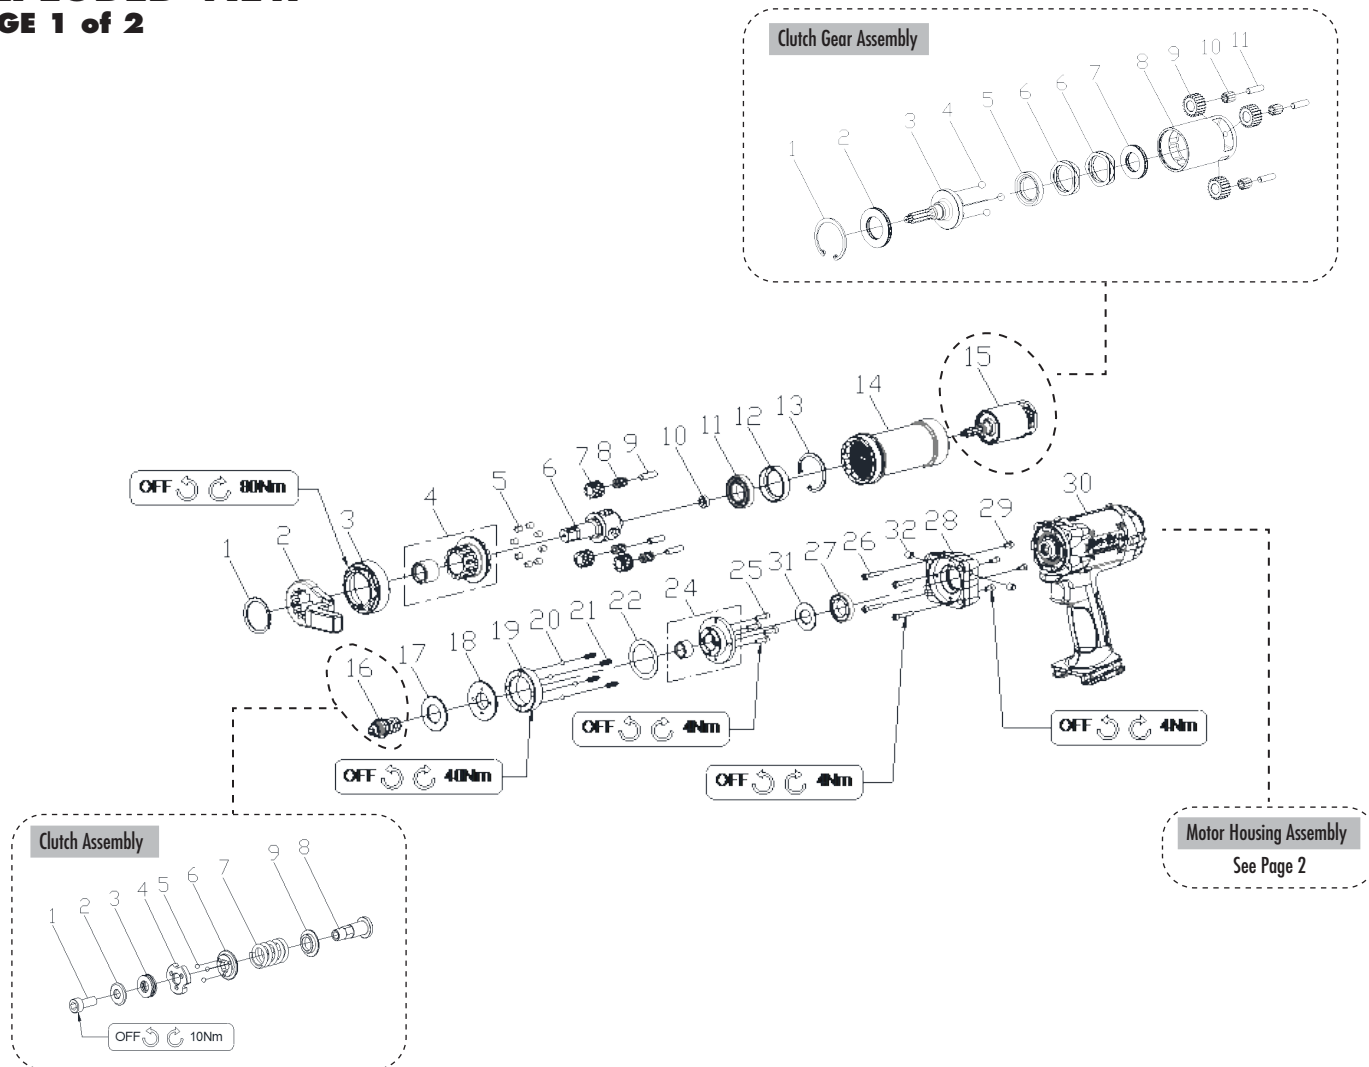

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
1	0-311024	C type Retainer Ring S35	1	3	33249-GWC025H-02	Clutch Central Gear	1	17	33239-GWC055H-01	Washer 39.5 x 18 x 2t	1
2	33257-GWC025H-01	Reaction Bar	1	4	0-521014	Steel Ball 6	3	18	33251-GWC090H-03	Rotary Seat	1
3	33254-GWC025H-01	Lock Nut	1	5	33251-GWC025H-04	Steel Ball Seat	1	19	33254-GWC090H-01	Lock Nut	1
4	32051-GWC025H-01	Connecting Holder Assembly	1	6	0-197002	Wave Spring 30 x 24 x 7.622	1	20	0-521010	Steel Ball 5	4
5	0-511171	Pin (6 x 8L)	8	7	0-231011	Thrust Needle Bearing	1	21	1100-507	Spring	4
6	33251-GWC025H-01	Gear Cage	1	8	33251-GWC025H-02	Clutch Gear	1	22	33239-GWC090H-01	Washer 45 x 33 x 0.5t	1
7	33249-GWC025H-01	Planet Gear	3	9	33249-GWC025H-03	Planet Gear	3	24	32051-GWC090H-01	Fixing Seat Assembly	1
8	0-511011	Pin (2 x 15L)	36	10	0-511092	Pin (2 x 9.8L)	30	25	0-101071	Cap Screw M4 x P0.7 x 16L	4
9	33255-011	Pin (6 x 23L)	3	11	0-511167	Pin	3	26	0-101008	Cap Screw M4 x P0.7 x 25L	4
10	0-201098	Ball Bearing 686ZZ (13 x 6 x 5T)	1					27	0-201058	Ball Bearing 6804ZZ (32 x 20 x 7T)	1
11	0-201059	Ball Bearing 6904ZZ (37 x 20 x 9T)	1	16	32029-GWC055-01	Clutch Assembly	1	28	33252-GWC090H-01	Housing Cover	1
12	33242-GWC025H-01	Bushing	1	1	0-101062	Cap Screw M6 x P1 x 12L	1	29	0-101005	Cap Screw M4 x P0.7 x 6L	4
13	0-321023	C type Retainer Ring (R40)	1	2	33239-GWC090H-02	Washer 6 x 16 x 2.15	1				
14	33249-GWC025H-05	Internal Gear	1	3	0-241003	Thrust Ball Bearing CRT8-16	1	30	32098-GWC025H-01	Motor Housing Assembly	1
15	32049-GWC025-01	Clutch Gear Assembly	1	4	33229-GWC055H-01	Upper Clutch Unit	1		See Page 2		
1	0-321013	C type Retainer Ring R35	1	5	0-521005	Steel Ball 3	3				
2	0-231012	Thrust Needle Bearing NTB2035+2AS	1	6	33229-GWC090H-02	Lower Clutch Unit	1	31	33239-GWC090H-04	Washer 31.9 x 25 x 2.5t	1
				7	33248-GWC055H-01	Spring	1	32	140S-108	Bushing	2
				8	33254-GWC090H-03	Clutch Bolt	1				
				9	33251-GWC055H-05	Spring Seat	1				



10000 SE PINE
PORTLAND, OR 97216
503-254-6600
FAX 503-255-2615


When ordering spare parts, please specify
tool type, part number, and description.

REVISED 06/25

SPCC-P25050 SIGNATURE SERIES PISTOL TOOL

EXPLODED VIEW - PAGE 2

Motor Housing Assembly

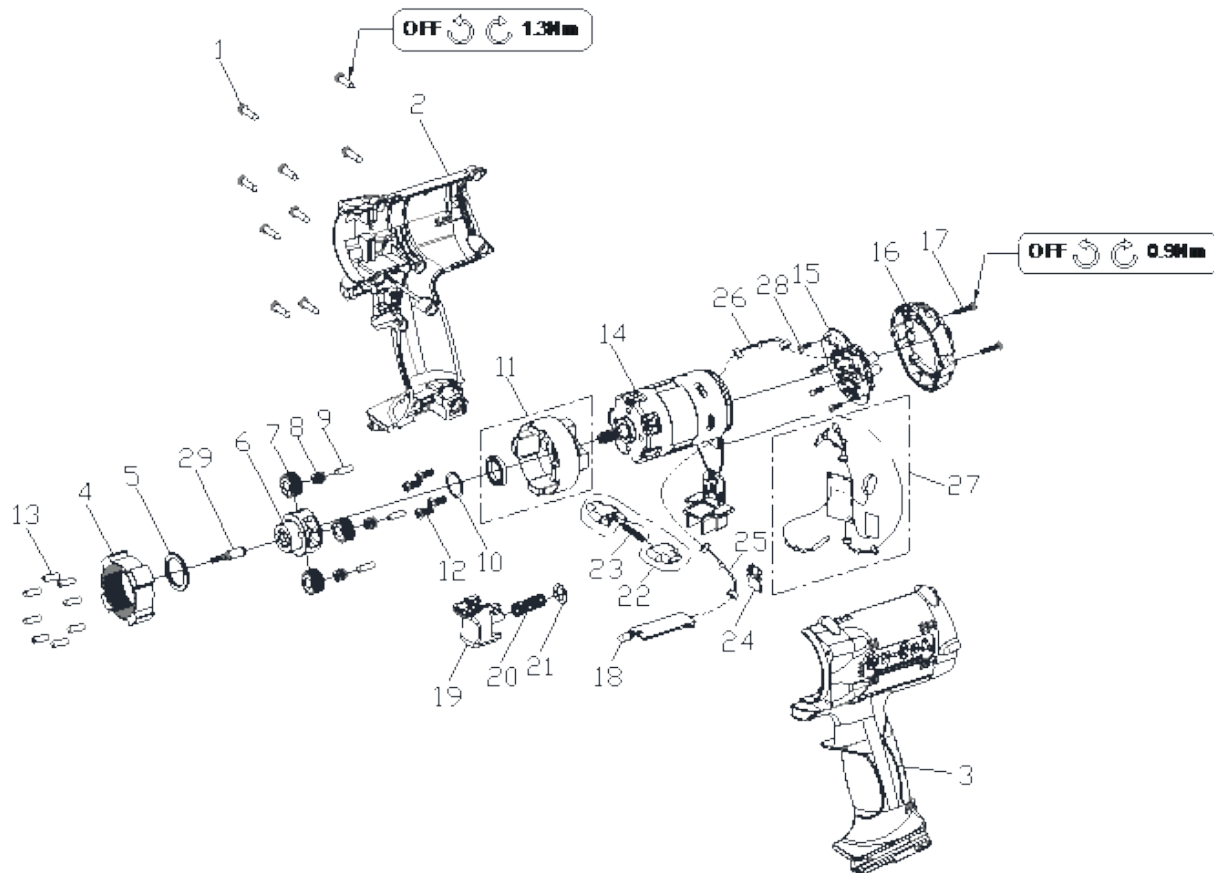

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
30	32098-GWC025H-01	Motor Housing Assembly	1	11	32050-PWAP-03	Gear Box Assembly	1	22	B09IWT#B1	F/R Valve (1 set x 2 pcs)	1
1	0-151020	Self-Tapping Screw M4 x 16L	9	12	0-121005	Cap Screw M4 x P0.7 x 10L	4	23	D48IWT	Spring	1
2	33101-GWC090H-01	Upper Housing	1	13	0-511050	Pin (4 x 12.8L)	8	24	33110-NPA-02	Cover	1
3	32602-GWC090H-06	Lower Housing	1	14	32083-GWC025-01	Brushless Motor	1	25	B86IWT	Connector Wire	1
4	33249-GWC-01	Gear Ring	1	15	32076-GWC025-01	LCM Board Assembly	1	26	B86PW35	Connector Wire	1
5	33239-PWAP-04	Washer	1	16	33110-NPA-01	Cover	1	27	32076-GWC-01	PCB-Storage	1
6	33251-GWC090H-07	Gear Cage	1	17	0-152001	Self-Tapping Screw 3 x 14L	2	28	0-151018	Self-Tapping Screw	4
7	33249-PWAP-09	Planet Gear 23T (Rohs)	3	18	32076-NPA-02	PC Board	1	29	33249-GWC025H-04	Central Gear	1
8	0-211003	Needle Bearing KT-477	3	19	B09PW#B1	Trigger Assembly	1				
9	0-511050	Pin (4 x 12.8L)	3	20	D48PW15	Spring	1				
10	33239-PWAP-02B	Washer 15.1 x 18.5 x 0.3t	1	21	C39PW15-3	Washer	1				



10000 SE PINE
PORTLAND, OR 97216
503-254-6600
FAX 503-255-2615

When ordering spare parts, please specify
tool type, part number, and description.