


SPCC-P55075DL SIGNATURE SERIES PISTOL TOOL

EXPLODED VIEW

PAGE 1 of 2

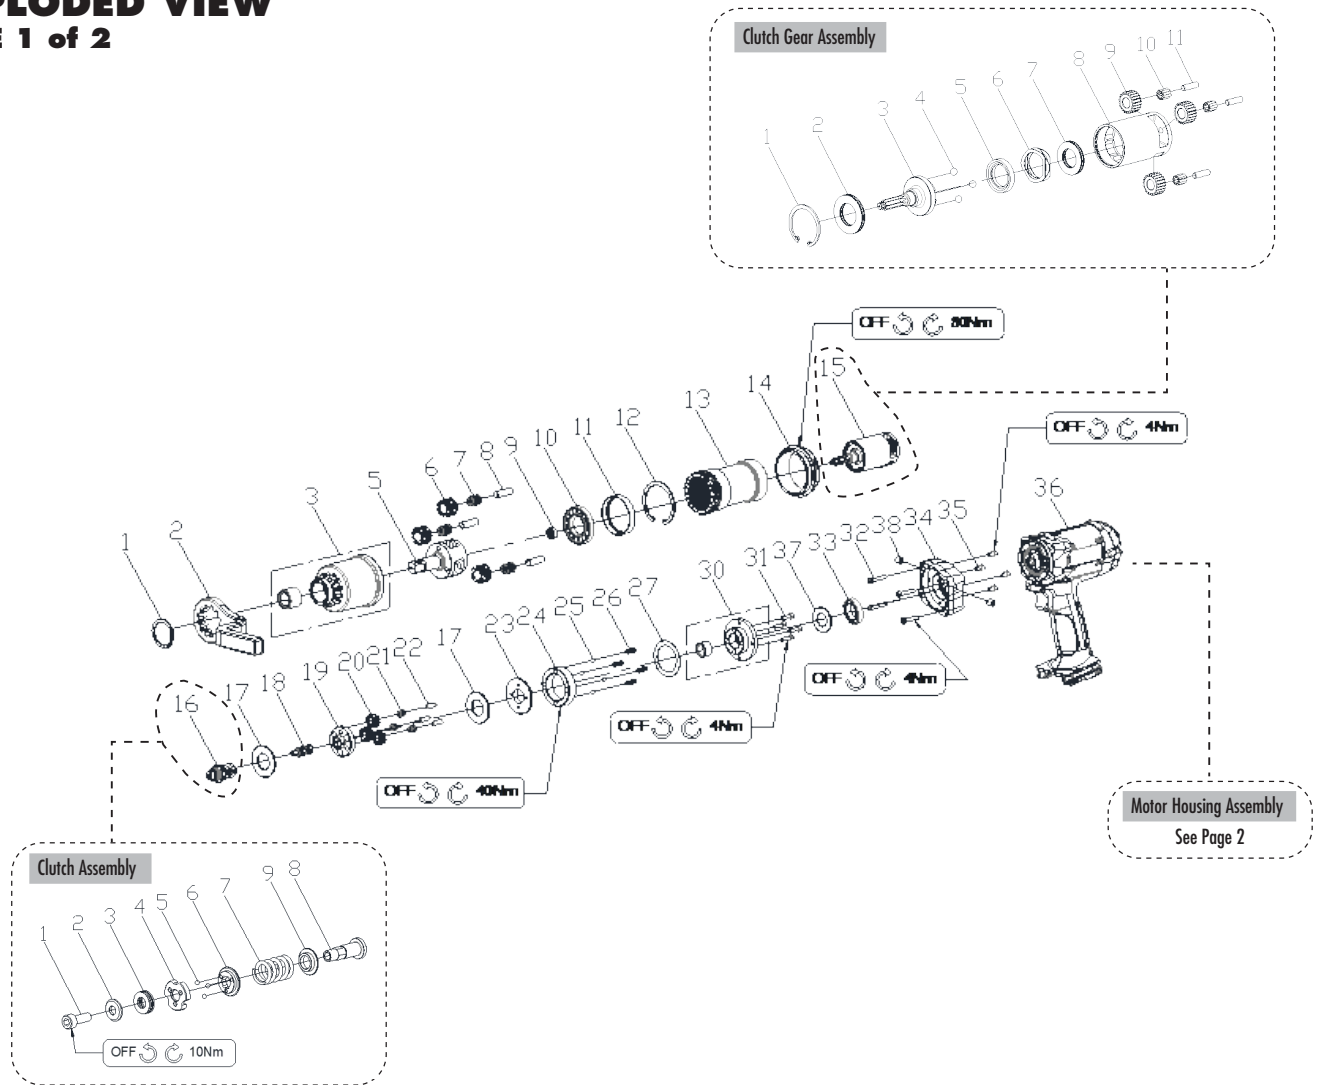

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
1	0-311022	C type Retainer Ring S45	1	5	33251-GWC055H-03	Steel Ball Seat	1	19	33251-GWC055H-04	Gear Plate	1
2	33257-GWC055H-02	Reaction Bar	1	6	0-197002	Wave Spring 30 x 24 x 7.62	1	20	33249-GWC055H-06	Planet Gear	3
3	32049-GWC055H-01	Internal Gear Assembly	1	7	0-231011	Thrust Needle Bearing NTB1730+2AS	1	21	0-511002	Pin (1.5 x 8L)	39
5	33251-GWC055H-01	Gear Cage	1	8	33251-GWC055H-02	Clutch Gear	1	22	0-511169	Pin (5 x 15L)	3
6	33249-GWC055H-02	Planet Gear	3	9	33249-GWC055H-05	Planet Gear	3	23	33251-GWC090H-03	Rotary Seat	1
7	0-511011	Pin (2 x 15L)	51	10	0-511107	Pin (1.5 x 10L)	45	24	33254-GWC090H-01	Lock Nut	1
8	33255-010	Pin (8 x 26L)	3	11	0-511166	Pin (6 x 20L)	3	25	0-521010	Steel Ball	4
9	0-201094	Ball Bearing 687ZZ (14 x 7 x 5T)	1	16	32029-GWC055-01	Clutch Assembly	1	26	1100-507	Spring	4
10	0-201097	Ball Bearing 16005 (47 x 25 x 8T)	1	1	0-101062	Cap Screw M6 x P1 x 12L	1	27	33239-GWC090H-01	Washer 45 x 33 x 0.5t	1
11	33242-GWC055H-01	Bushing	1	2	33239-GWC090H-02	Washer 6 x 16 x 2.15	1	30	32051-GWC090H-01	Needle Bearing Assembly	1
12	0-321022	C type Retainer Ring R50	1	3	0-241003	Thrust Ball Bearing CRT8-16	1	31	0-101071	Cap Screw M4 x P0.7 x 16L	4
13	33249-GWC055H-08	Internal Gear	1	4	33229-GWC055H-01	Upper Clutch Unit	1	32	0-101008	Cap Screw M4 x P0.7 x 25L	4
14	33254-GWC055H-01	Lock Nut	1	5	0-521005	Steel Ball 3	3	33	0-201058	Ball Bearing 6804ZZ (32 x 20 x 7T)	1
15	32049-GWC055-01	Clutch Gear Assembly	1	6	33229-GWC090H-02	Lower Clutch Unit	1	34	33252-GWC090H-01	Housing Cover	1
1	0-321013	C type Retainer Ring R35	1	7	33248-GWC055H-01	Spring	1	35	0-101005	Cap Screw M4 x P0.7 x 6L	4
2	0-231012	Thrust Needle Bearing NTB2035+2AS	1	8	33254-GWC090H-03	Clutch Bolt	1	36	32098-GWC055H-02	Motor Housing Assembly	1
3	33249-GWC055H-03	Clutch Central Gear	1	9	33251-GWC055H-05	Spring Seat	1	See Page 2			
4	0-521014	Steel Ball 6	3	17	33239-GWC055H-01	Washer 39.5 x 18 x 2t	2	37	33239-GWC090H-04	Washer 31.9 x 25 x 2.5t	1
				18	33249-GWC055H-04	Central Gear	1	38	140S-108	Bushing	2



10000 SE PINE
PORTLAND, OR 97216
503-254-6600
FAX 503-255-2615


When ordering spare parts, please specify
tool type, part number, and description.

REVISED 06/25

SPCC-P55075DL SIGNATURE SERIES PISTOL TOOL

EXPLODED VIEW - PAGE 2

Motor Housing Assembly

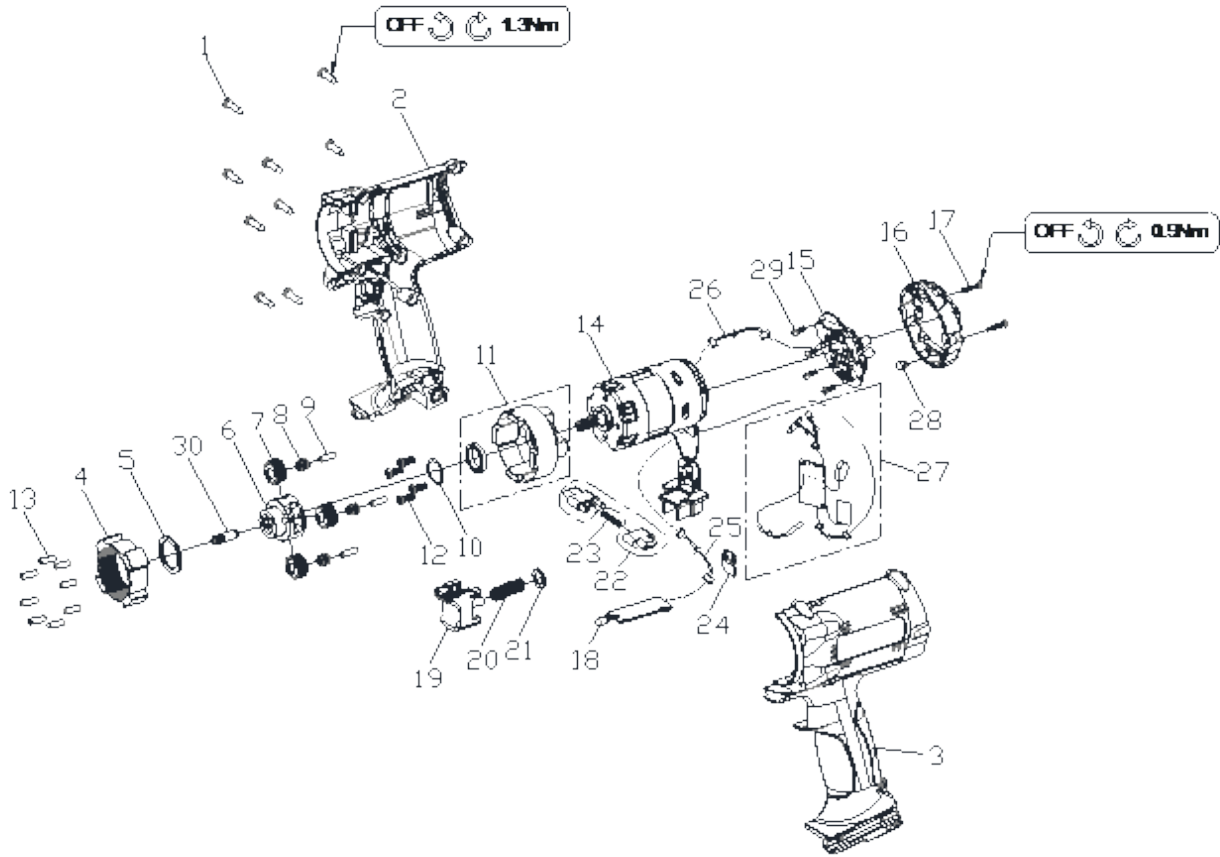

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
36	32098-GWC055H-02	Motor Housing Assembly	1	11	32050-PWAP-03	Gear Box Assembly	1	22	B09IWT#B1	F/R Valve (1 set x 2 pcs)	1
1	0-151020	Self-Tapping Screw M4 x 16L	9	12	0-121005	Cap Screw M4 x P0.7 x 10L	4	23	D48IWT	Spring	1
2	33101-GWC090H-01	Upper Housing	1	13	0-511050	Pin (4 x 12.8L)	8	24	33110-NPA-02	Cover	1
3	32602-GWC090H-06	Lower Housing	1	14	32083-GWC055-02	Brushless Motor	1	25	B86IWT	Connector Wire	1
4	33249-GWC-01	Gear Ring	1	15	32076-GWC025-02	LCM Board Assembly	1	26	B86PW35	Connector Wire	1
5	33239-PWAP-04	Washer	1	16	33110-NPA-03	Cover	1	27	32076-GWC-01	PCB-Storage	1
6	33251-GWC090H-07	Gear Cage	1	17	0-152001	Self-Tapping Screw 3 x 14L	2	28	33109-GWC-01	Safety Button	1
7	33249-PWAP-09	Planet Gear 23T(Rohs)	3	18	32076-NPA-02	PC Board	1	29	0-151018	Self-Tapping Screw	4
8	0-211003	Needle Bearing KT-477	3	19	B09PW#B1	Trigger Assembly	1	30	33249-GWC055H-07	Central Gear	1
9	0-511050	Pin (4 x 12.8L)	3	20	D48PW15	Spring	1				
10	33239-PWAP-02B	Washer 15.1 x 18.5 x 0.3t	1	21	C39PW15-3	Washer	1				



10000 SE PINE
PORTLAND, OR 97216
503-254-6600
FAX 503-255-2615

When ordering spare parts, please specify
tool type, part number, and description.