


SPCC-P90075DL SIGNATURE SERIES PISTOL TOOL

EXPLODED VIEW

PAGE 1 of 2

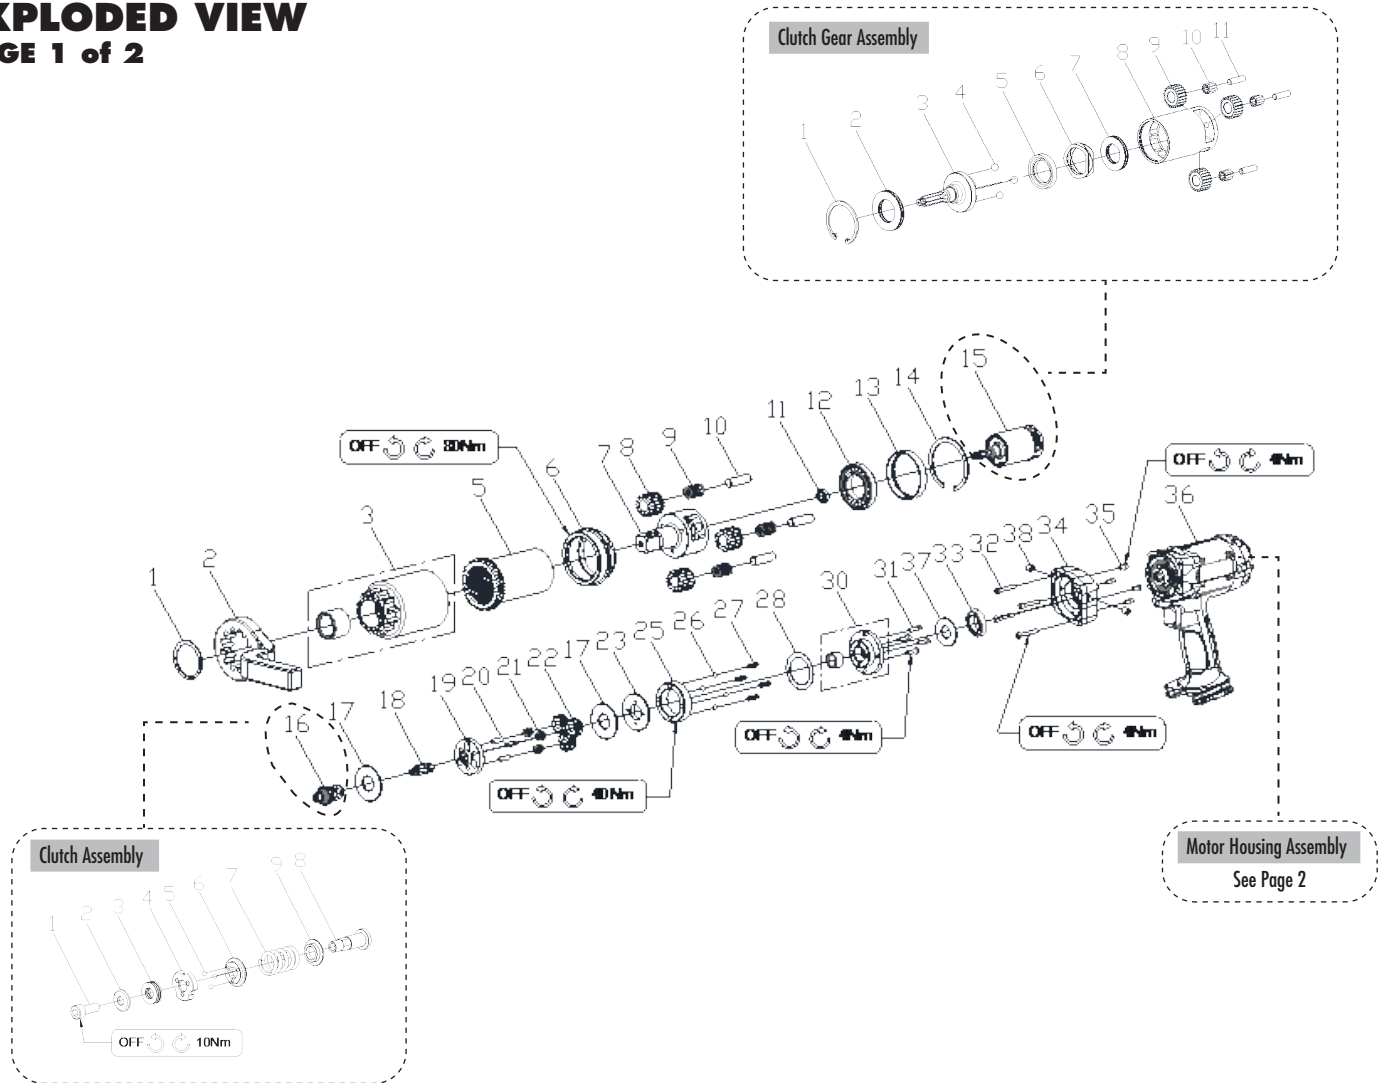

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
1	0-311026	C type Retainer Ring S42	1	6	0-197001	Wave Spring 35 x 27 x 8.381	1	21	0-511107	Pin (1.5 x 10L)	39
2	33257-GWC090H-02	Reaction Bar	1	7	0-231012	Thrust Needle Bearing	1	22	33249-GWC090H-07	Planet Gear	3
3	32049-GWC090H-01	Internal Gear Assembly	1	8	33251-GWC090H-04	NTB2035+2AS	1	23	33251-GWC090H-03	Rotary Seat	1
5	33249-GWC090H-04	Internal Gear	1	9	33249-GWC090H-06	Clutch Gear	1	25	33254-GWC090H-01	Lock Nut	1
6	33254-GWC090H-02	Lock Nut	1	10	0-511161	Pin (1.5 x 11.8L)	51	26	0-521010	Steel Ball 5	4
7	33251-GWC090H-01	Gear Cage	1	11	0-511170	Pin (7x22L)	3	27	1100-507	Spring	4
8	33249-GWC090H-02	Planet Gear	3	16	32029-GWC090-01	Clutch Assembly	1	28	33239-GWC090H-01	Washer 45 x 33 x 0.5t	1
9	0-511070	Pin (2 x 22L)	54	1	0-101062	Cap Screw M6 x P1 x 12L	1	30	32051-GWC090H-01	Fixing Seat Assembly	1
10	33255-009	Pin (10 x 34L)	3	2	33239-GWC090H-02	Washer 6 x 16 x 2.15	1	31	0-101071	Cap Screw M4 x P0.7 x 16L	4
11	0-201011	Ball Bearing 688ZZ (16 x 8 x 5T)	1	3	0-241003	Thrust Ball Bearing CRT8-16	1	32	0-101008	Cap Screw M4 x P0.7 x 25L	4
12	0-201092	Ball Bearing 16006 (55 x 30 x 9T)	1	4	33229-GWC090H-01	Upper Clutch Unit	1	33	0-201058	Ball Bearing 6804ZZ (32 x 20 x 7T)	1
13	33242-GWC090H-01	Bushing	1	5	0-521005	Steel Ball 3	3	34	33252-GWC090H-01	Housing Cover	1
14	0-321026	C type Retainer Ring R60	1	6	33229-GWC090H-02	Lower Clutch Unit	1	35	0-101005	Cap Screw (M4 x P0.7 x 6L)	4
15	32049-GWC090-01	Clutch Gear Assembly	1	7	33248-GWC090H-01	Spring	1	36	32098-GWC090H-02	Motor Housing Assembly	1
1	0-321024	C type Retainer Ring R39	1	8	33254-GWC090H-03	Clutch Bolt	1	See Page 2			
2	0-231013	Thrust Needle Bearing NTA1625+2AS	1	9	33251-GWC090H-08	Spring Seat	1	37	33239-GWC090H-04	Washer 31.9 x 25 x 2.5t	1
3	33249-GWC090H-03	Clutch Central Gear	1	17	33239-GWC090H-03	Washer 43 x 18 x 2t	2	38	140S-108	Bushing	2
4	0-521046	Steel Ball 8	3	18	33249-GWC090H-05	Central Gear	1				
5	33251-GWC090H-05	Steel Ball Seat	1	19	33251-GWC090H-06	Gear Plate	1				
				20	0-511168	Pin (5 x 17L)	3				



10000 SE PINE
PORTLAND, OR 97216
503-254-6600
FAX 503-255-2615


When ordering spare parts, please specify
tool type, part number, and description.

REVISED 06/25

SPCC-P90075DL SIGNATURE SERIES PISTOL TOOL

EXPLODED VIEW - PAGE 2

Motor Housing Assembly

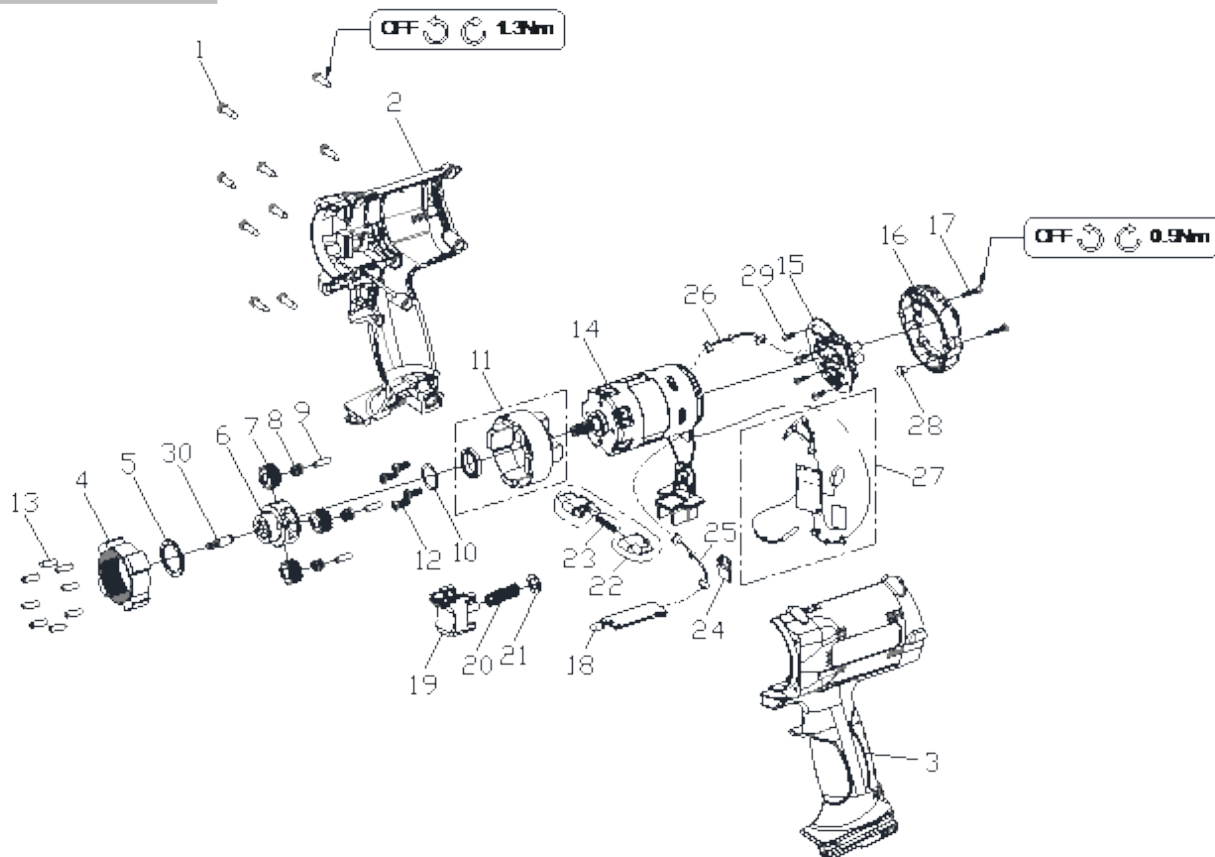

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
36	32098-GWC090H-02	Motor Housing Assembly	1	11	32050-PWAP-03	Gear Box Assembly	1	22	B09IWT#B1	F/R Valve (1 set x 2 pcs)	1
1	0-151020	Self-Tapping Screw M4 x 16L	9	12	0-121005	Cap Screw M4 x P0.7 x 10L	4	23	D48IWT	Spring	1
2	33101-GWC090H-01	Upper Housing	1	13	0-511050	Pin (4 x 12.8L)	8	24	33110-NPA-02	Cover	1
3	32602-GWC090H-06	Lower Housing	1	14	32083-GWC090-02	Brushless Motor	1	25	B86IWT	Connector Wire	1
4	33249-GWC-01	Gear Ring	1	15	32076-GWC025-02	LCM Board Assembly	1	26	B86PW35	Connector Wire	1
5	33239-PWAP-04	Washer	1	16	33110-NPA-03	Cover	1	27	32076-GWC-01	PCB-Storage	1
6	33251-GWC090H-07	Gear Cage	1	17	0-152001	Self-Tapping Screw 3 x 14L	2	28	33109-GWC-01	Safety Button	1
7	33249-PWAP-09	Planet Gear 23T (Rohs)	3	18	32076-NPA-02	PC Board	1	29	0-151018	Self-Tapping Screw	4
8	0-211003	Needle Bearing KT-477	3	19	B09PW#B1	Trigger Assembly	1	30	33249-GWC090H-08	Central Gear	1
9	0-511050	Pin (4 x 12.8L)	3	20	D48PW15	Spring	1				
10	33239-PWAP-02B	Washer 15.1 x 18.5 x 0.3t	1	21	C39PW15-3	Washer	1				



10000 SE PINE
PORTLAND, OR 97216
503-254-6600
FAX 503-255-2615

When ordering spare parts, please specify
tool type, part number, and description.