



## VCE-1-1 Vacuum Extractor

**Caution: Always dispose of pulse fluid properly.  
Never pour down drain or in garbage can.**

### How to use:

- Hook air up to air inlet.
- Put needle into the oil filler plug on the pulse unit.
- When air bubbles appear in the extractor hose, all of the fluid has been extracted from the pulse unit.
- Pull the switch back to turn off the vacuum.
- Remove the needle from the pulse unit.

Now your pulse unit is ready to be refilled or rebuilt.

1204 E. Maple Rd.  
Troy, MI 48083  
(800) 852-1368  
FAX (800) 582-9015

#### Corporate Headquarters

10000 S.E. Pine St.  
Portland, OR 97216  
(800) 852-1368  
FAX (800) 582-9015  
[www.aimco-global.com](http://www.aimco-global.com)

Ave. Morones Prieto 2110 Pte.  
Col. Loma Larga  
Monterrey, NL CP 64710, Mexico  
52-81 1001-1600  
FAX 52-81 1001-1630

LIT-MAN360  
Rev. 03/2016  
Printed in USA  
©2016 AIMCO