



The Gen IV controller uses the


From the main menu, select Controller.

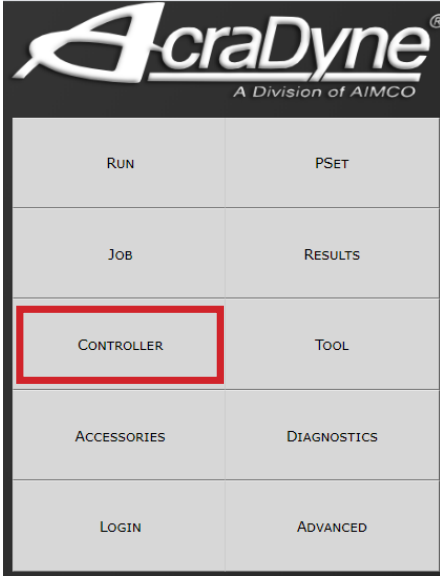

Select Protocols.

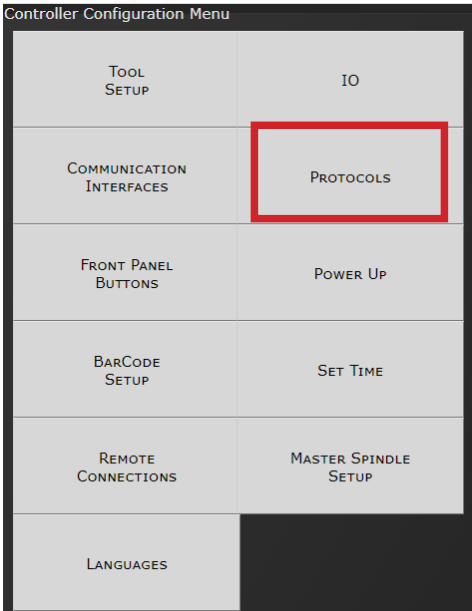

Then select XML.

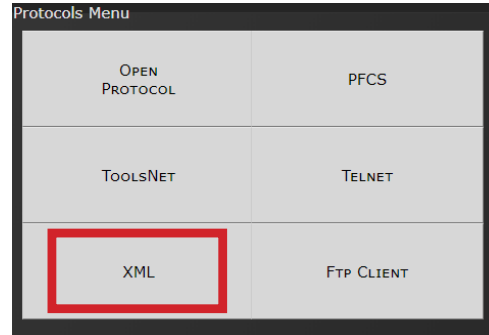

Consult with your local network administrator for the correct configuration.

