


ADTT - Quick Start Guide

Getting started with the Auditor ADTT Torque Tester

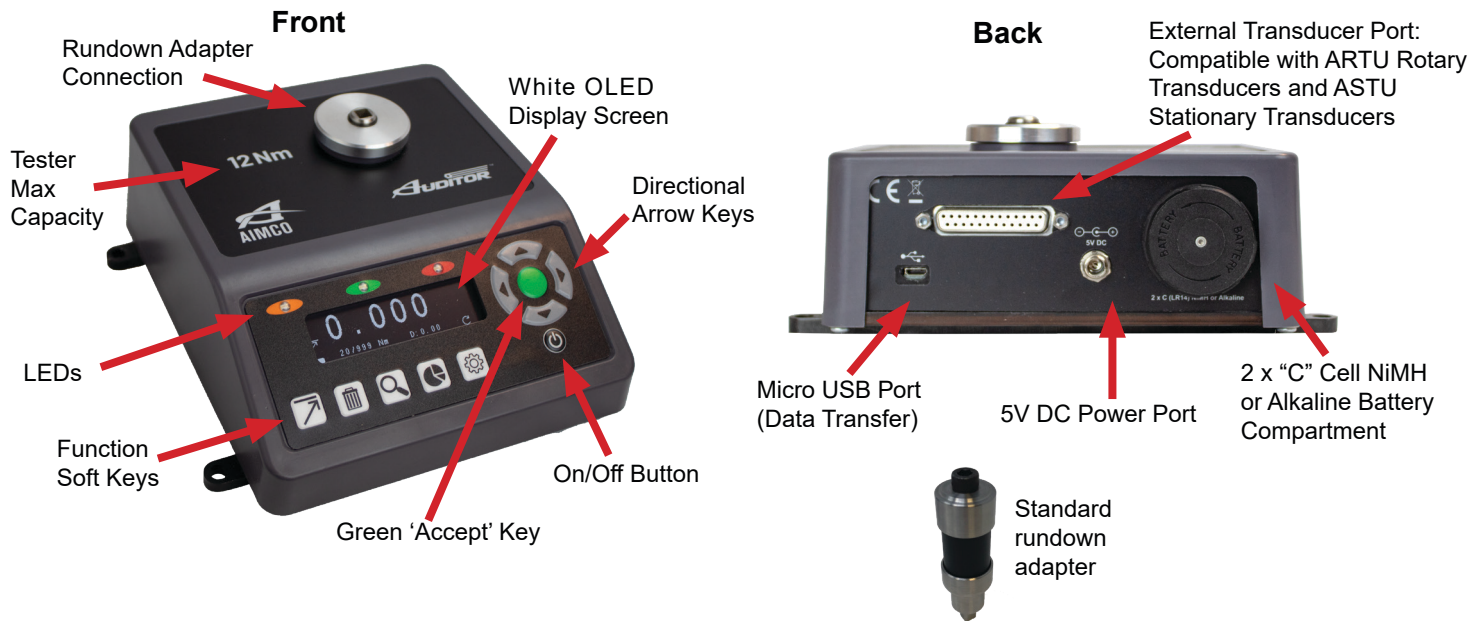

Please note. To avoid over-torquing, ensure the ADTT has the correct torque range for the tool before beginning.




1 Switching On

Turn on your ADTT by pressing the on/off button situated below the arrow keys. Pressing this button whilst the ADTT is on will turn it off.

2 Starting the ADTT

The first screen that shows is the splash screen, which changes to show the ADTT's serial number and calibration due date. The software version and keyboard version are also both indicated by TM and KB respectively.

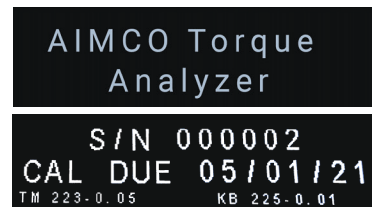

3 Measurement Screen


The last measurement mode used (Peak, Click, Track or Pulse) will be automatically selected first. This can be changed by pressing the 'Measurement Mode' function key.

Toggle the measurement modes by pressing the function key until you get to the mode you require, then you are ready to start measuring torque with the ADTT.




4 Measurement Screen cont.

The icons on the measurement screen denote the following:

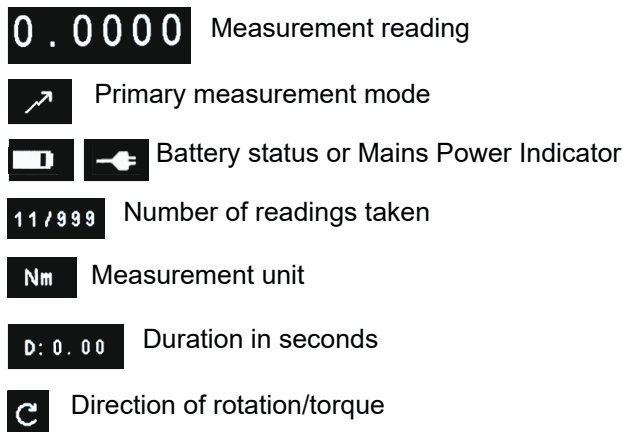


5 Measurement Modes

The following torque measurement mode icons appear on the ADTT torque tester:

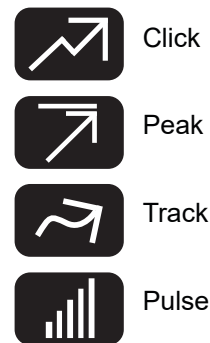

ADTT - Fixed Function Key Icons

The following is a guide to the fixed function key icons that appear on the ADTT model.

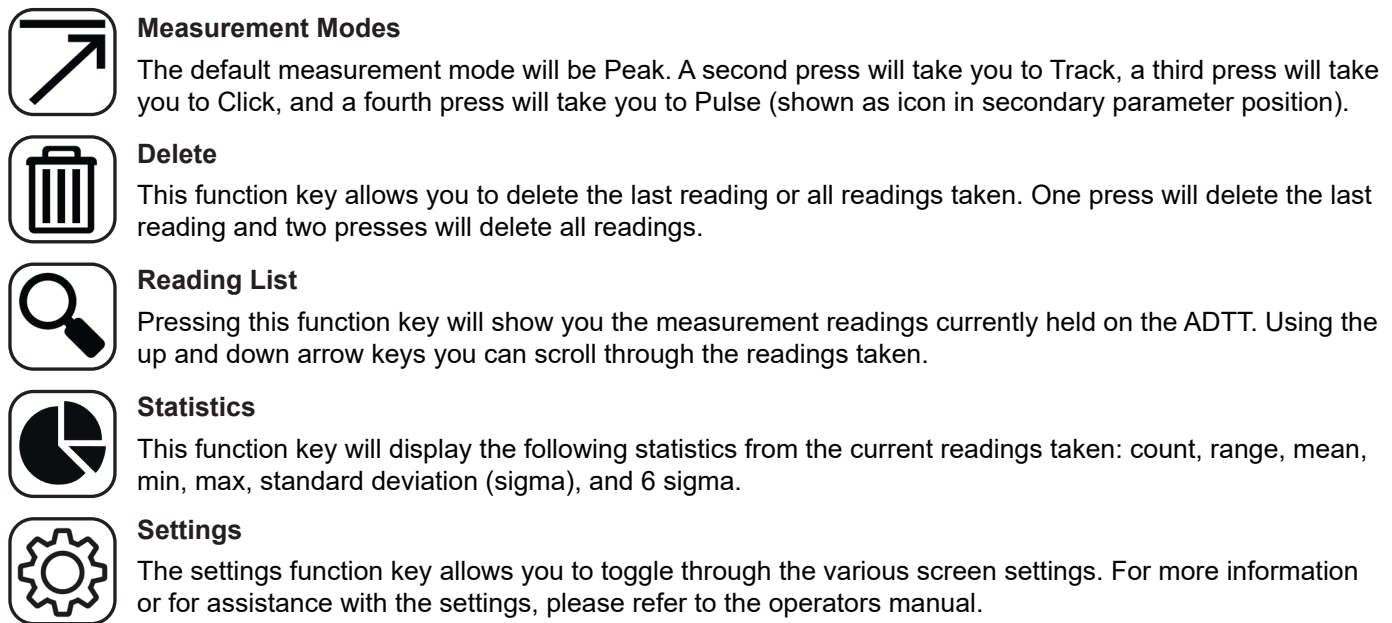

ADTT User Manual

For more in-depth information about the ADTT, download the complete Operators Manual online from our website. The manual contains more information about the ADTT, including features and technical specifications, detailed product settings, and easy to follow guidance for efficient operation.

Visit www.aimco-global.com/manuals or scan the QR code for direct access to the AIMCO user manual homepage.



AIMCO CORPORATE HEADQUARTERS
10000 SE Pine Street
Portland, Oregon 97216
Phone: (503) 254-6600
Toll Free: 1-800-852-1368
www.aimco-global.com

AIMCO CORPORATION DE MEXICO SA DE CV
Ave. Cristobal Colon 14529
Chihuahua, Chihuahua. 31125
Mexico
Phone: (01-614) 380-1010
Fax: (01-614) 380-1019

LIT-MAN875QS Rev. 05/21/25
©2025 AIMCO