


# UX-800S, 800C OIL-PULSE TOOLS

## EXPLODED VIEW

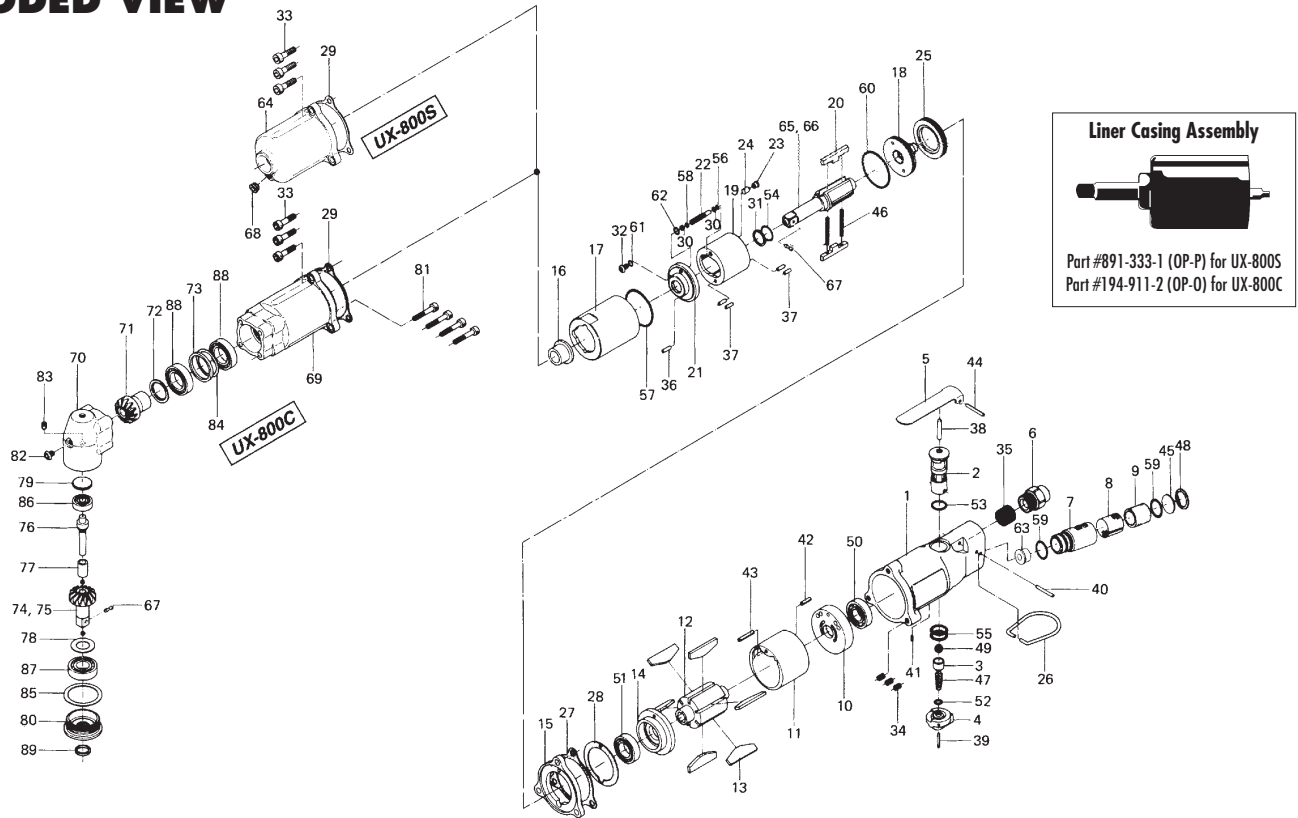

## PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
1	180-025-6	Handle	1	35	965-073-0	Heli-Sert (UNF5/8 x N6)	1	68	966-100-0	Allen Head Plug (PT1/8)	1
2	180-210-6	Reverse Valve	1	36	969-450-0	Pin (G) (3 x 8)	1	<b>PARTS FOR UX-800C</b>			
3	186-100-1	Valve	1	37	970-206-0	Pin (H) (3 x 8)	4	66	194-319-2	Anvil (0)	1
4	020-212-1	Reverse Lever	1	38	970-327-0	Pin (H) (4 x 26)	1	67	891-300-1	Socket Retainer Pin Assembly	1
5	500-107-1	Valve Lever	1	39	973-022-0	Roll Pin (2 x 22)	1	69	179-439-8	Front Casing	1
6	180-091-6	Air Inlet Bushing	1	40	971-163-0	Pin (2.5 x 23)	1	70	179-441-7	Angle Head Casing	1
7	194-780-4	Exhaust Stack	1	41	973-005-0	Roll Pin (2 x 5)	1	71	179-420-6	Driving Gear	1
8	194-042-4	Silencer	1	42	973-112-0	Roll Pin (3 x 12)	1	72	179-425-6	Driving Gear Spacer	1
9	611-780-4	Filter	1	43	973-118-0	Roll Pin (3 x 18)	1	73	179-423-6	Driving Gear Bushing Spacer	1
10	180-285-6	Rear Plate	1	44	973-124-0	Roll Pin (3 x 24)	1	74	891-346-1	Driven Gear (P)	1
11	180-286-6	Cylinder	1	45	975-598-0	Round Plate (18 x 1)	1	75	020-430-1	Driven Gear (0)	1
12	194-287-2	Rotor	1	46	976-800-0	Spring (3.7 x 30) (0.5) WPC	2	76	188-431-7	Driven Gear Spindle	1
13	167-288-6	Blade (PC)	6	47	977-103-0	Cone Spring (6 x 9.5 x 16)	1	77	020-432-1	Driven Gear Spindle Cover	1
14	180-289-6	Front Plate	1	48	979-318-0	Inner Snap Ring (IRTW-18)	1	78	020-433-1	Driven Gear Spacer	1
15	180-027-6	Separator	1	49	981-208-0	Ball (5/16)	1	79	562-391-7	Spindle Rear Cover	1
16	185-328-2	Anvil Bushing	1	50	982-403-0	Ball Bearing (EE4)	1	80	179-488-6	Angle Head Casing Cover	1
17	194-905-2	Liner Casing	1	51	982-903-0	Ball Bearing (6902)	1	81	945-129-0	Allen Head Bolt (M5 x 25)	4
18	194-901-2	Rear Liner Plate	1	52	990-322-0	O-Ring (ARPS68-107)	1	82	945-127-0	Hexagon Round Head Bolt (M5 x 6)	1
19	194-902-2	Liner	1	53	990-009-0	O-Ring (P10A)	1	83	954-206-0	Allen Head Cone Point Screw (M5 x 6)	1
20	194-440-2	Driving Blade	2	54	992-020-0	O-Ring (Q12) (NTN)	1	84	975-803-0	Adjusting Spacer (30 x 26 x T)	1
21	194-904-2	Front Liner Plate	1	55	990-015-0	O-Ring (P15)	2	85	975-836-0	Adjusting Spacer (36 x 32.5 x T)	1
22	194-907-2	Relief Valve Spindle	1	56	990-320-0	O-Ring (ARPS68-003)	1	86	982-021-0	Ball Bearing (626)	1
23	194-969-2	Relief Valve Plug	1	57	990-337-0	O-Ring (JW1530-27)	1	87	982-101-0	Ball Bearing (6001)	1
24	194-970-2	Relief Valve	1	58	990-900-0	O-Ring (SNS-2)	1	88	982-904-0	Ball Bearing (6903)	2
25	194-906-2	Liner Casing Cover	1	59	990-914-0	O-Ring (SNS-16)	2	89	990-910-0	O Ring (SNS-12-5)	1
26	010-790-1	Suspension Ring	1	60	990-924-0	O-Ring (SNS-30)	1	<b>ACCESSORIES</b>			
27	180-854-6	Handle Packing	1	61	990-971-0	O-Ring (SNS-3)	1	939-104-0	Allen Wrench (5 mm)	1	
28	193-856-1	Separator Packing	1	62	990-973-0	O-Ring (SNS-5)	1	939-109-0	Allen Wrench (2 mm) (64 x 64)	1	
29	180-867-6	Front Casing Packing	1	<b>PARTS FOR UX-800S</b>							
30	944-002-0	Supporter Ring (2.6 x 4.5 x 1)	2	63	194-781-2	Exhaust Stack Bushing	1				
31	944-213-0	Supporter Ring (12 x 15.9 x 1)	1	64	180-439-6	Front Casing	1				
32	945-942-0	Hexagon Round Head Bolt (M4 x 6)	1	65	891-310-1	Anvil (OP-P)	1				
33	945-120-0	Allen Head Bolt (M5 x 20)	3	66	194-319-2	Anvil (0)	1				
34	965-011-0	Heli-Sert (M5 x 1.5D)	3	67	891-300-1	Socket Retainer Pin Assembly	1				

## FOOTNOTES



10000 SE PINE  
PORTLAND, OR 97216  
503-254-6600  
FAX 503-255-2615

When ordering spare parts, please specify tool type, part number, and description.