US-LT51PB SERIES SCREWDRIVER

EXPLODED VIEW

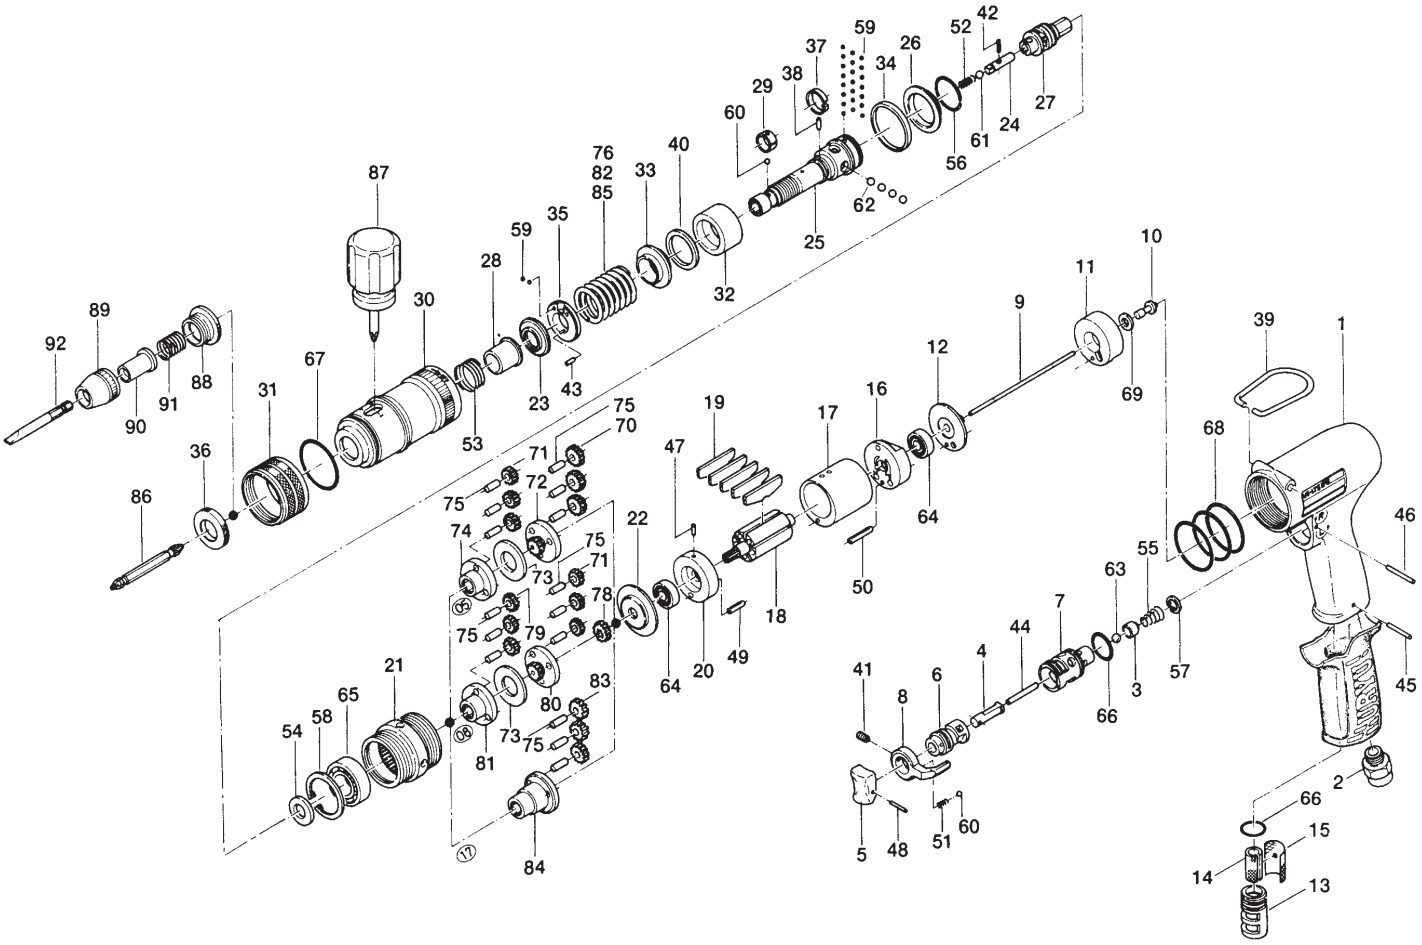

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.
1	445-025-9	Casing	1
2	480-091-8	Air Inlet Bushing	1
3	480-100-9	Valve	1
4	443-103-5	Valve Rod Bushing	1
5	177-107-5	Valve Lever	1
6	480-210-9	Reverse Valve	1
7	480-211-9	Reverse Valve Bushing	1
8	480-212-8	Reverse Lever	1
9	445-104-8	Valve Rod	1
10	443-254-5	Shut-Off Valve	1
11	445-282-9	Handle Bushing	1
12	445-291-8	Rear Plate Spacer	1
13	480-780-8	Exhaust Slack	1
14	177-835-6	Filter	1
15	480-042-8	Silencer	1
16	444-285-4	Rear Casing	1
17	445-286-8	Cylinder	1
18	444-287-4	Rotor	1
19	444-288-6	Blade (PC)	5
20	444-289-4	Front Plate	1
21	444-029-9	Gear Casing	1
22	444-807-4	Spacer	1
23	472-257-8	Adjusting Screw	1
24	471-318-5	Pilot Pin	1
25	444-319-4	Anvil	1
26	444-334-8	Anvil Spacer	1
27	444-346-3	Cam	1
28	472-351-7	Bit Sleeve	1
29	471-356-7	Bit Band	1
30	444-369-8	Clutch Casing	1
31	444-370-4	Clutch Casing Sleeve	1
32	444-375-3	Cam Ring	1

Index Number	Part Number	Description	Qty.
33	444-379-3	Retainer	1
34	444-397-8	Nut Flange	1
35	444-562-4	Stopper	1
36	444-567-4	Bushing	1
37	444-670-4	Band	1
38	444-764-4	Notch Pin	1
39	010-790-1	Suspension Ring	1
40	944-023-0	Back-up Ring (P22A)	1
41	952-106-0	Allen Head Dog Point Screw (M4 x 6)	1
42	969-470-0	Pin (E) (2 x 8)	1
43	970-092-0	Pin (H) (2 x 5.5)	1
44	970-228-0	Pin (H) (3 x 28)	1
45	971-120-0	Pin (2 x 20)	1
46	971-123-0	Pin (2 x 23)	1
47	973-007-0	Roll Pin (2 x 7)	1
48	973-012-0	Roll Pin (2 x 12)	1
49	973-072-0	Roll Pin (2.5 x 12)	1
50	973-080-0	Roll Pin (2.5 x 20)	1
51	976-006-0	Spring (3 x 5 x 0.4)	1
52	976-058-0	Spring (4.5 x 11 x 0.4)	1
53	976-450-0	Spring (18.5 x 10 x 1.0)	1
54	975-109-0	Spacer (20 x 9.5 x 1.5)	1
55	977-150-0	Cone Spring (6.8 x 8.5 x 8 x 0.4)	1
56	978-229-0	Snap Ring (23 x 1)	1
57	979-002-0	Inner Snap Ring (9)	1
58	979-025-0	Inner Snap Ring (32)	1
59	981-001-0	Ball (3/32)	24
60	981-002-0	Ball (1/8)	2
61	981-004-0	Ball (3/16)	1
62	981-005-0	Ball (7/32)	4
63	981-206-0	Ball (1/4) (Black)	1
64	982-066-0	Ball Bearing (607ZZ)	2

Index Number	Part Number	Description	Qty.
65	982-102-0	Ball Bearing (6002)	1
66	990-912-0	O-Ring (SNS-14)	2
67	990-935-0	O-Ring (SNS-31.5)	1
68	990-925-0	O-Ring (SNS-32)	3
69	996-411-0	Packing (11 x 6 x 1)	1
70	444-470-4	First Planet Gear	3 ■
71	444-471-4	Second Planet Gear	3 ■✖
72	444-480-4	First Gear Cage	1 ■
73	444-483-4	Gear Casing Spacer	1 ■✖
74	444-485-4	Second Gear Cage	1 ■
75	972-110-0	Roller Pin (4 x 10)	6 ■✖●
76	976-620-0	Spring (27.5 x 38 x 3.5)	1 ■
77	174-842-8	Handle Jacket	1
78	444-460-3	Rotor Gear	1 ✖
79	444-471-3	Second Planet Gear	3 ✖
80	444-480-3	First Planet Cage	1 ✖
81	444-485-3	Second Gear Cage	1 ✖
82	976-614-0	Spring (27 x 38 x 3.0)	1 ✖
83	444-470-4	First Planet Gear	3 ●
84	444-480-2	Gear Cage	1 ●
85	976-588-0	Spring (25 x 38 x 2.3)	1 ●

ACCESSORIES

86	916-810-0	(+) Double Bit (No.2 x 75)	1
87	939-402-0	Manual Driver (No.2)	1
88	444-082-4	Connecting Screw	1
89	471-057-7	Bit Casing	1
90	917-350-0	Finder (7.3 x 56 x 24-4E)	1
91	976-330-0	Spring (13.8 x 18 x 0.8)	1
92	916-030-0	(-) Bit (5 x 56)	1

FOOTNOTES

■ = Parts for US-LT51PB-05
✖ = Parts for US-LT51PB-08
● = Parts for US-LT51PB-17

AIMCO also offers a complete line of standard & special adapters, bits, sockets and extensions.

When ordering spare parts, please specify tool type, part number and description.

AIMCO
10000 SE PINE, PORTLAND, OR 97216
503-254-6600 FAX 503-255-2615

REVISED 10/04