




AIMCO Intelli-Control Tool System Manual

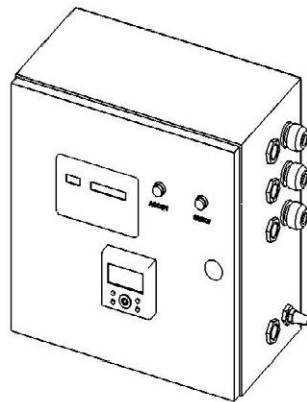

Model ABC-4000-3

PO Box 16460, Portland OR 97292-0460 • 800-852-1368 • Fax 800-582-9015

www.aimco-global.com

Contents

Installation	1
System Requirements	1
Connections	1
<i>Figure 1. Left Side of Control Box</i>	1
<i>Figure 2. Right Side of Control Box</i>	1
<i>Figure 3. Bottom View of Box</i>	2
Tool Controllers	2
Operation	3
Control Box Features	3
<i>Figure 5. Control Box Features</i>	3
Using the Intelli-Control Tool System	3
Process Details	3
<i>Figure 6. Bar Code Controller</i>	3
<i>Figure 7. Smart Relay</i>	4
Smart Relay Features	4
<i>Figure 8. Smart Relay Display and Buttons</i>	4
Smart Relay Screens	4
<i>Figure 9. Main Screen</i>	4
<i>Figure 10. Edit Task Air Pressure Screen</i>	4
<i>Figure 11. Task Air Pressure Screen</i>	5
Default Air Pressure Settings	5
Using the AUX AIR	5
<i>Figure 12. AUX AIR Bar Code Label</i>	5
Maintenance	6
SMC IP Air Regulator	6
Additional Information	7
Troubleshooting Guide	7
Recommended Spare Parts	7

Installation

The system control box is supplied with (4) mounting holes in the rear of the box. These holes are 1/2" in diameter and are 14.5" between centers. Use these holes to mount the control box in the desired location

System Requirements

The following outlines the system requirements:

Electrical - 120VAC, 4 AMPS

Air - 120 SCFM @ 80 PSI

Connections

Power is connected by inserting the power cord into a standard 120VAC outlet.

Air is supplied to the control box by connecting air to the supply connection on the left side of the control box. An air line filter should be installed prior to the control box to remove any moisture in the air (customer supplied).

Tool air connections can be located on the right side of the control box. These connections are 1/2 NPT as well. The tool connections are labeled "A", "B" and "C" from top to bottom.

Make sure to check all fitting bulkheads when making the connections to ensure that none of them have loosened during shipping.

NOTE: If any tool lubrication is to be used, it must be installed down stream of the control box.

Refer to the following figures for connection locations.

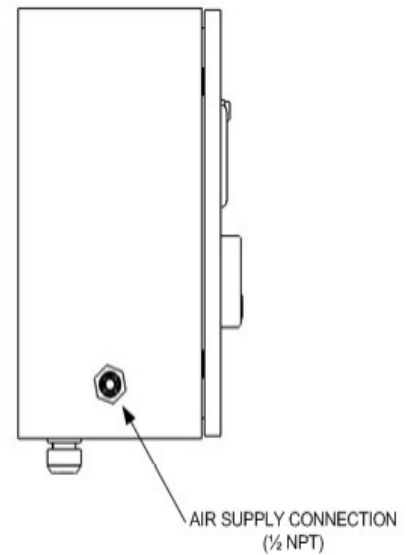


Figure 1. Left Side of Control Box

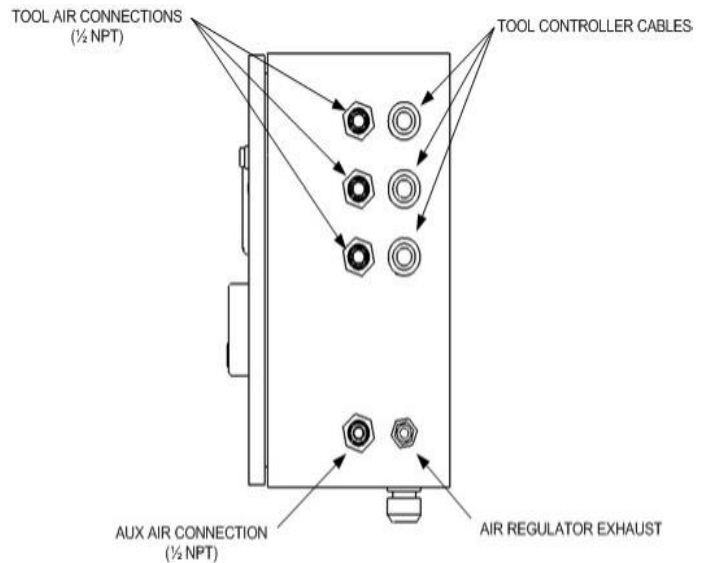


Figure 2. Right Side of Control Box

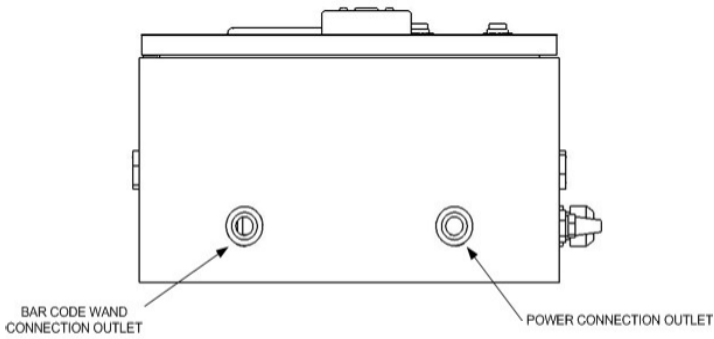


Figure 3. Bottom View of Box

Once all of the air and power connections have been made, the cables for the tool controls must be connected to the corresponding tool control boxes. Please refer to the wiring schematic for these connections.

Tool Controllers

Once all of the tool controller cables have been connected to the tool controllers, they may need to be programmed for the specific work selects and torques. Please refer to the tool controller manuals included with this system.

UEC-4500 Tool Controller

When using the UEC-4500 Tool Controller, the following programming changes must be made in order to communicate properly with the Intelli-Control box:

NOTE: Please refer to the UEC-4500 manual for instructions on changing these modes.

Mode 71 = Value 7
Mode 72 = Value 8
Mode 73 = Value 3
Mode 74 = Value 3
Mode 75 = Value 4
Mode 76 = Value 8



Figure 7. Smart Relay

Smart Relay Features

The air pressure for each task and the AUXAIR can be individually set. This is done using the smart relay. The following outlines the relay and how to adjust the air pressure for each task.

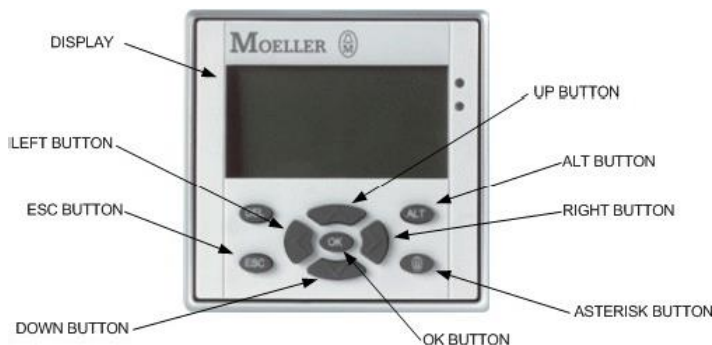


Figure 8. Smart Relay Display and Buttons

Display - This displays the information for the operator.

UP, DOWN, LEFT, RIGHT BUTTONS - These buttons are used to navigate between the screens and change PSI values.

ALT, ASTERISK BUTTONS - Used to increase and decrease the PSI values.

ESC BUTTON - Pressing the ESC key from any screen returns to the MAIN screen.

OK BUTTON - Used to acknowledge an error from the tool controllers.

Smart Relay Screens

The following is a list of the screens available on the smart relay and their functions:



Figure 9. Main Screen

The MAIN screen displays the current air pressure setting and the current task. Pressing the **ESC** button on any screen returns to this screen.



Figure 10. Edit Task Air Pressure Screen

Pressing the Down Button on the Main screen displays the Edit Task Air Pressure screen. This screen allows the operator to adjust the air pressure for each task.

Pressing the RIGHT or LEFT button from this screen toggles through the TASK screens.



Figure 11. Task Air Pressure Screen

The TASK AIR PRESSURE screen displays the individual air pressures.

Pressing the UP or DOWN button increases or decreases the pressure by 1 PSI.

Pressing the ALT or * button increases or decreases the pressure by 5 PSI.

Once the desired pressure is displayed, press the RIGHT or LEFT button to go to the next task or press the ESC button to return to the MAIN screen. The new pressure setting will be used the next time that the task is scanned.

Default Air Pressure Settings

The smart relay is preset with the following air settings:

TASK #	PSI
1	45
2	45
3	45
4	55
5	55
6	55
7	60
8	60
9	60
10	60
11	70

TASK #	PSI
12	70
13	70
14	80
15	80
16	85
17	85
18	85
19	85
20	85
21	85
22	85
23	85
24	85
AUX AIR	80

Using the AUX AIR

The controller is equipped with an auxiliary air (AUX AIR) connection. This can be used for an additional, non-controlled tool.

To activate the AUX AIR, simply scan the bar code label found on the front of the control box located under the smart relay.



Figure 12. AUX AIR Bar Code Label

This will set the controller air pressure to the air pressure set for AUX AIR in the smart relay and will disable all of the tools.

NOTE: The AUX AIR connection is always active and is set to the "current" air pressure.

Maintenance

The Intelli-Control Tool System is designed with minimal maintenance. The following items should be performed regularly to ensure the life of the control box.

- Empty the air filter daily.
- Check all fitting bulkheads weekly to make sure that none of them have loosened.

SMC IP Air Regulator

The air regulator is set for a maximum air pressure of 101 PSI. This not only limits the air pressure to the tools, but changes the linear scale of the regulator. If the air pressure needs to be changed or the air regulator needs to be replaced, perform the following:

1. **UNLOCK the regulator.** This is done by holding down the “UNLOCK “ button on the top of the regulator until “UNL” flashes on the regulator display and then press the “SET” button.
2. **SET the max air pressure.** Use the Down arrow key to step through the menu until “F2” is displayed and press “SET”. The number on the display is the current max air pressure setting. Use the “UP” and “DOWN” arrow buttons to adjust the number to the desired value and press the “SET” button.
3. **LOCK the regulator.** This is done by holding down the “LOCK” button until “LOC” flashes on the display and then press the “SET” button.

NOTE: Refer to the air regulator manual for more information.

Additional Information

Troubleshooting Guide

The following is a basic list of problems:

Problem	Cause	Solution
Bar Code Data Controller Displays "999" when label is scanned	The Data Controller does not recognize the label. Either the label is damaged or is not a programmed number.	Check the label to make sure that it is not damaged. If the number needs to be added to the program, contact your AIMCO Rep.
No air to tool	Tool is disabled based on the task scanned.	Check the Bar Code Data Controller display for the correct tool.
No air to system	Supply air is disconnected or removed.	Check supply air connection or air supply.
No power to system	System has been unplugged or circuit breaker has been tripped.	Check that the power is plugged in. If the circuit breaker has been tripped or the fuse is blown, contact your AIMCO Rep.

Recommended Spare Parts

The following parts should be kept in stock:

Vendor	Part Number	Description	Quantity
SMC	ITV3050-31N4L4	IP Regulator, 120 PSI, 0-10VDC, 1/2" NPT	1
Keyence	BL-80RKE	Bar Code Reader - Handheld	1
Keyence	DV90SET	Bar Code Controller Software	1
Berkert	456443X	Valve, 1/2" NPT, 24VDC Normally Closed	1
Moeller	-	Easy Soft Pro 6.10 Easy Relay software	1
Moeller	EASY800 PC-CAB	Easy Relay Programming Cable	1
-	-	Standard USB Cable for programming Bar Code Data Controller	1



Corporate Headquarters

10000 SE Pine Street
Portland, OR 97216
800-852-1368
FAX 800-582-9015
www.aimco-global.com

Ave. Cristóbal Colon 14529
Chihuahua, Chihuahua. 31125
Mexico
011-52-(614) 380-1010
FAX 011-52-(614) 380-1019